

SW-2 SPOT-DMX

Advanced: 33CH Basic: 26CH



Mode/Channel		Channel Name	DMX	Function
33CH	26CH			
1	1	Pan	0-255	0-540
2	2	Pan 16bit	0-255	16bit adjustable
3	3	Tilt	0-255	0-270
4	4	Tilt 16bit	0-255	16bit adjustable
5	5	Pan/Tilt speed	0-255	fast to slow
6	6	Dimmer	0-255	0-100%
7		Dimmer 16bit	0-255	16bit adjustable
8	7	Strobe	0-3	off
			4-7	on
			8-76	synchronized strobe, slow to fast
			77-145	pulse strobe, slow to fast
			146-215	random strobe, slow to fast
216-255	on			
9	8	Virtual Strobe	0-1	no function
			2-128	shaking strobe, slow to fast
			129-255	fading strobe, slow to fast
10	9	cyan	0-255	0-100%
11	10	magenta	0-255	0-100%
12	11	yellow	0-255	0-100%
13	12	CTO	0-255	0-100%
14	13	Color wheel 1	0-6	white
			7-13	color 1
			14-20	color 2
			21-27	color 3
			28-34	color 4
			35-41	color 5
			42-48	color 6
			49-59	color 7
			60-187	split color
			188-219	color scroll, fast to slow
220-223	stop			
224-255	reverse color scroll, slow to fast			
15	14	Rotating gobo wheel	0-7	white
			8-15	gobo 1
			16-23	gobo 2
			24-31	gobo 3
			32-39	gobo 4
			40-47	gobo 5
48-55	gobo 6			

SW-2 SPOT-DMX

Advanced: 33CH Basic: 26CH



Mode/Channel		Channel Name	DMX	Function
33CH	26CH			
15	14	Rotating gobo wheel	56-63	gobo 7
			64-71	gobo 7 shaking, slow to fast
			72-79	gobo 6 shaking, slow to fast
			80-87	gobo 5 shaking, slow to fast
			88-95	gobo 4 shaking, slow to fast
			96-103	gobo 3 shaking, slow to fast
			104-111	gobo 2 shaking, slow to fast
			112-119	gobo 1 shaking, slow to fast
			120-127	white
			128-191	reverse color scroll, slow to fast
			192-255	reverse gobo scroll, slow to fast
16	15	Gobo rotating	0-63	gobo index
			64-145	gobo rotating, fast to slow
			146-149	stop
			150-231	reverse gobo rotating, slow to fa
			232-255	gobo rotating back and forth
17		Gobo rotating 16bit	0-255	16bit adjustable
18	16	Static gobo wheel	0-5	white
			6-11	gobo 1
			12-17	gobo 2
			18-23	gobo 3
			24-29	gobo 4
			30-35	gobo 5
			36-41	gobo 6
			42-47	gobo 7
			48-53	gobo 8
			54-63	gobo 9
			64-69	gobo 9 shaking, slow to fast
			70-75	gobo 8 shaking, slow to fast
			76-81	gobo 7 shaking, slow to fast
			82-87	gobo 6 shaking, slow to fast
			88-93	gobo 5 shaking, slow to fast
			94-99	gobo 4 shaking, slow to fast
			100-105	gobo 3 shaking, slow to fast
106-111	gobo 2 shaking, slow to fast			
112-117	gobo 1 shaking, slow to fast			
118-127	white			
128-191	reverse color scroll, slow to fast			
192-255	reverse gobo scroll, slow to fast			

SW-2 SPOT-DMX

Advanced: 33CH Basic: 26CH



Mode/Channel		Channel Name	DMX	Function
33CH	26CH			
19	17	animation wheel	0-255	animation effect
20	18	animation rotating	0-124	gobo rotating, fast to slow
			125-130	stop
			131-255	reverse gobo rotating, slow to fa
21	19	Focus	0-255	0-100%
22		Focus 16bit	0-255	16bit adjustable
23		Auto focus	0-10	no function
			11-30	0-5 meters auto focus
			31-50	6 meters auto focus
			51-70	7 meters auto focus
			71-90	8 meters auto focus
			91-110	9 meters auto focus
			111-130	10 meters auto focus
			131-150	12.5 meters auto focus
			151-170	15 meters auto focus
			171-190	17.5 meters auto focus
			191-210	20-60 meters auto focus
			211-255	auto detect distance
24	20	Zoom	0-255	Big to small
25		Zoom 16bit	0-255	16bit adjustable
26	21	Prism	0-4	no function
			5-255	prism effect
27	22	Prism rotating	0-127	prism index
			128-189	gobo rotating, fast to slow
			190-193	stop
			194-255	reverse gobo rotating, slow to fa
28	23	Iris	0-63	big to small
			64-127	auto change, slow to fast
			128-191	slow open, fast close, slow to fas
			192-255	slow close, fast open, slow to fas
29	24	frost	0-255	frost effect
30	25	frost 1	0-255	frost effect 2
31		CMY macro	0-9	no function
			10-255	CMY macro
32		CMY macro speed	0-255	CMY macro, fast slow
33	26	Control	0-7	no function
			8-15	pan/tilt blackout
			16-23	color blackout
			24-31	gobo blackout

SW-2 SPOT-DMX

Advanced: 33CH Basic: 26CH



Mode/Channel		Channel Name	DMX	Function
33CH	26CH			
33	26	Control	32-39	pan/tilt/color blackout
			40-47	pan/tilt/gobo blackout
			48-55	pan/tilt/color/gobo blackout
			56-95	no function
			96-103	pan reset
			104-111	tilt reset
			112-119	color reset
			120-127	gobo+gobo rotating reset
			128-131	no function
			132-135	no function
			136-143	prism reset
			144-151	no function
			152-159	all reset
			160-167	iris reset
			168-175	frost+animation reset
			176-183	no function
			184-191	CMY reset
			192-199	fan ECO
			200-207	fan FULL
			208-215	fan AUTO
			216-220	no function
			221-225	iris fast mode
			226-230	iris smooth mode
231-235	XY swap on			
236-240	XY swap off			
241-245	minimum zoom focus on			
246-250	minimum zoom focus off			
251-255	no function			