

# T1X BEAM-DMX

Advanced: 13CH Basic: 7CH



Mode/Channel		Channel Name	DMX	Function
13CH	7CH			
1	1	Pan	0-255	0-540
2		Pan 16bit	0-255	16bit adjustable
3	2	Tilt	0-255	0-270
4		Tilt 16bit	0-255	16bit adjustable
5		Pan/Tilt speed	0-255	fast to slow
6	3	Color wheel	0-3	white
			4-7	color 1
			8-11	color 9
			12-15	color 3
			16-19	color 4
			20-23	color 5
			24-27	color 11
			28-31	color 7
			32-35	color 8
			36-39	color 9
			40-43	color 3
			44-47	color 11
			48-51	color 12
			52-55	color 13
			56-63	color 8
			64-67	white+color 1
			68-71	color 1+color 2
			72-75	color 2+color 3
			76-79	color 3+color 4
			80-83	color 4+color 5
84-87	color 5+color 6			
88-91	color 6+color 7			
92-95	color 7+color 8			
96-99	color 8+color 9			
100-103	color 9+color 10			
104-107	color 10+color 11			
108-111	color 11+color 12			
112-115	color 12+color 13			
116-119	color 13+color 14			
120-127	color 14 +white			
128-191	reverse color scroll, slow to fast			
192-255	color scroll, slow to fast			
7	4	Static gobo wheel	0-3	white
			4-7	gobo 1

# T1X BEAM-DMX

Advanced: 13CH Basic: 7CH



Mode/Channel		Channel Name	DMX	Function
13CH	7CH			
7	4	Static gobo wheel	8-11	gobo 2
			12-15	gobo 3
			16-19	gobo 4
			20-23	gobo 5
			24-27	gobo 6
			28-31	gobo 7
			32-35	gobo 8
			36-39	gobo 9
			40-43	gobo 10
			44-47	gobo 11
			48-51	gobo 12
			52-55	gobo 13
			56-59	gobo 14
			60-63	gobo 15
			64-67	gobo 16
			68-71	gobo 17
			72-75	gobo 17 shaking, slow to fast
			76-79	gobo 16 shaking, slow to fast
			80-83	gobo 15 shaking, slow to fast
			84-87	gobo 14 shaking, slow to fast
			88-91	gobo 13 shaking, slow to fast
			92-95	gobo 12 shaking, slow to fast
			96-99	gobo 11 shaking, slow to fast
			100-103	gobo 10 shaking, slow to fast
			104-107	gobo 9 shaking, slow to fast
			108-111	gobo 8 shaking, slow to fast
			112-115	gobo 7 shaking, slow to fast
			116-119	gobo 6 shaking, slow to fast
120-123	gobo 5 shaking, slow to fast			
124-127	gobo 4 shaking, slow to fast			
128-131	gobo 3 shaking, slow to fast			
132-135	gobo 2 shaking, slow to fast			
136-139	gobo 1 shaking, slow to fast			
140-143	white			
144-199	reverse color scroll, slow to fast			
200-255	color scroll, slow to fast			
8	5	prism and prism rotating	0-7	off
			8-12	prism
			13-130	prism rotating, slow to fast

# T1X BEAM-DMX

Advanced: 13CH Basic: 7CH



Mode/Channel		Channel Name	DMX	Function
13CH	7CH			
8	5	prism and prism rotating	131-247	reverse prism rotating, slow to fast
			248-255	prism
9	6	Focus	0-255	0-100%
10		Dimmer	0-255	0-100%
11	7	Strobe	0-7	off
			8-15	on
			16-131	synchronized strobe, slow to fast
			132-167	fast close slow open, slow to fast
			168-203	slow close fast open, slow to fast
			204-239	pulse strobe, slow to fast
			240-247	random strobe, slow to fast
248-255	on			
12		Control	0-7	off
			8-15	pan/tilt blackout
			16-23	color blackout
			24-31	gobo blackout
			32-39	pan/tilt/color blackout
			40-47	pan/tilt/gobo blackout
			48-55	pan/tilt/gobo/color blackout
			56-87	off
			88-95	lamp on
			96-103	pan reset
			104-111	tilt reset
			112-119	color reset
			120-127	gobo reset
			128-135	frost reset
			136-143	prism reset
			144-151	focus reset
			152-159	all reset
160-167	strobe reset			
168-231	off			
232-239	lamp off			
240-255	off			
13		Built-in	0-7	off
			8-23	built-in 1
			24-39	built-in 2
			40-55	built-in 3
			56-71	built-in 4
			72-87	built-in 5

# T1X BEAM-DMX

Advanced: 13CH Basic: 7CH



Mode/Channel		Channel Name	DMX	Function
13CH	7CH			
13		Built-in	88-103	built-in 6
			104-119	built-in 7
			120-135	built-in 8
			136-151	XY built-in sound control 1
			152-167	XY built-in sound control 2
			168-183	XY built-in sound control 3
			184-199	XY built-in sound control 4
			200-215	XY built-in sound control 5
			216-231	XY built-in sound control 6
			232-247	XY built-in sound control 7
			248-255	XY built-in sound control 8