

# T2 SPOT-DMX CHART

Advanced: 16CH Basic: 10CH



Mode/Channel		Channel Name	DMX	Function
16CH	10CH			
1	1	Pan	0-255	0-540
2		Pan 16bit	0-255	16bit adjustable
3	2	Tilt	0-255	0-270
4		Tilt 16bit	0-255	16bit adjustable
5		Pan/Tilt speed	0-255	fast to slow
6	3	Color wheel 1	0-7	white
			8-15	color 1
			16-23	color 2
			24-31	color 3
			32-39	color 4
			40-47	color 5
			48-55	color 6
			56-63	color 7
			64	white
			65-189	split color
			190-221	color scroll, fast to slow
			222-223	stop
7	4	Rotating gobo wheel	0-7	open
			8-15	gobo 1
			16-23	gobo 2
			24-31	gobo 3
			32-39	gobo 4
			40-47	gobo 5
			48-55	gobo 6
			56-63	gobo 7
			64-71	gobo 7 shaking, slow to fast
			72-79	gobo 6 shaking, slow to fast
			80-87	gobo 5 shaking, slow to fast
			88-95	gobo 4 shaking, slow to fast
			96-103	gobo 3 shaking, slow to fast
			104-111	gobo 2 shaking, slow to fast
			112-119	gobo 1 shaking, slow to fast
120-127	open			
128-191	gobo scroll, slow to fast			
192-255	reverse gobo scroll, slow to fast			
8	5	Gobo rotating	0-63	gobo index
			64-147	gobo rotating, slow to fast
			148-231	reverse gobo rotating, slow to fast

# T2 SPOT-DMX CHART

Advanced: 16CH Basic: 10CH



Mode/Channel		Channel Name	DMX	Function
16CH	10CH			
8	5	Gobo rotating	232-255	gobo rotating back and forth
9	6	Static gobo wheel	0-6	open
			7-13	gobo 1
			14-20	gobo 2
			21-27	gobo 3
9	6	Static gobo wheel	28-34	gobo 4
			35-41	gobo 5
			42-48	gobo 6
			49-55	gobo 7
			56-63	gobo 8
			64-71	gobo 8 shaking, slow to fast
			72-78	gobo 7 shaking, slow to fast
			79-85	gobo 6 shaking, slow to fast
			86-92	gobo 5 shaking, slow to fast
			93-99	gobo 4 shaking, slow to fast
			100-106	gobo 3 shaking, slow to fast
			107-113	gobo 2 shaking, slow to fast
			114-120	gobo 1 shaking, slow to fast
10	7	Prism	121-127	open
			128-191	gobo scroll, slow to fast
			192-255	reverse gobo scroll, slow to fast
			0-7	no function
			8-12	prism effect
11	8	Focus	13-130	prism rotating, slow to fast
			131-247	reverse prism rotating, slow to fast
			248-255	prism effect
			0-255	0-100%
12	9	Zoom	0-255	Big to small
13		Dimmer	0-255	0-100%
14	10	Strobe	0-3	off
			4-7	on
			8-76	synchronized strobe, slow to fast
			77-145	pulse strobe, slow to fast
			146-215	random strobe, slow to fast
15		Control	216-255	on
			0-7	no function
			8-15	pan/tilt blackout
			16-23	color blackout
			24-31	gobo blackout

# T2 SPOT-DMX CHART

Advanced: 16CH Basic: 10CH



Mode/Channel		Channel Name	DMX	Function
16CH	10CH			
15		Control	32-39	pan/tilt/color blackout
			40-47	pan/tilt/gobo blackout
			48-55	pan/tilt/color/gobo blackout
			56-87	no function
			88-95	no function
			96-103	pan reset
			104-111	tilt reset
			112-119	color reset
			120-127	gobo+gobo rotating reset
			128-135	no function
			136-143	prism reset
			144-151	no function
			152-159	all reset
			160-255	no function
	16			Built-in
		8-23	built-in 1	
		24-39	built-in 2	
		40-55	built-in 3	
		56-71	built-in 4	
		72-87	built-in 5	
		88-103	built-in 6	
		104-119	built-in 7	
		120-135	built-in 8	
		136-151	pan/tilt built-in sound control 1	
		152-167	pan/tilt built-in sound control 2	
		168-183	pan/tilt built-in sound control 3	
		184-199	pan/tilt built-in sound control 4	
		200-215	pan/tilt built-in sound control 5	
		216-231	pan/tilt built-in sound control 6	
		232-247	pan/tilt built-in sound control 7	
	248-255	pan/tilt built-in sound control 8		