



模式/通道						通道名称	DMX值	功能
135CH	111CH	64CH	30CH	24CH	15CH			
1	1	1	1	1	1	X轴	0-255	X轴 0-540°
2	2	2	2	2	2	X轴 16bit	0-255	16bit可调
3	3	3	3	3	3	Y轴	0-255	Y轴 0-260°
4	4	4	4	4	4	Y轴 16bit	0-255	16bit可调
5	5	5	5	5	5	XY速度	0-255	由快到慢
6	6	6	6	6		CTC	0	无功能
							1-255	色温从19000K到2700K
7	7	7	7	7	13	颜色 1(外圈)	0-4	无功能
							5-9	颜色1
							10-14	颜色2
							15-19	颜色3
							20-24	颜色4
							25-29	颜色5
							30-34	颜色6
							35-39	颜色7
							40-44	颜色8
							45-49	颜色9
							50-54	颜色10
							55-59	颜色11
							60-64	颜色12
							65-69	颜色13
							70-74	颜色14
							75-79	颜色15
							80-84	颜色16
							85-89	颜色17
							90-94	颜色18
							95-99	颜色19
							100-104	颜色20
							105-109	颜色21
							110-114	颜色22
							115-119	颜色23
							120-124	颜色24
							125-129	颜色25
							130-134	颜色26
							135-139	颜色27
							140-144	颜色28
							145-149	颜色29
							150-154	颜色30
							155-159	颜色31
							160-164	颜色32
							165-169	颜色33
							170-174	颜色34
							175-179	无功能
							180-201	颜色顺时针渐变 快到慢
							202-207	停(颜色停在此时的颜色)
							208-229	颜色逆时针渐变 快到慢
							230-234	无功能
							235-249	颜色跳变 快到慢
							250-255	无功能
8	8	8	8	8	13	颜色2(中心)	0-4	无功能
							5-9	颜色1
							10-14	颜色2
							15-19	颜色3
							20-24	颜色4
							25-29	颜色5
							30-34	颜色6
							35-39	颜色7
							40-44	颜色8
							45-49	颜色9
							50-54	颜色10
							55-59	颜色11
							60-64	颜色12
							65-69	颜色13



模式/通道						通道名称	DMX值	功能
135CH	111CH	64CH	30CH	24CH	15CH			
8	8	8	8	8	13	颜色2(中心)	70-74	颜色14
							75-79	颜色15
							80-84	颜色16
							85-89	颜色17
							90-94	颜色18
							95-99	颜色19
							100-104	颜色20
							105-109	颜色21
							110-114	颜色22
							115-119	颜色23
							120-124	颜色24
							125-129	颜色25
							130-134	颜色26
							135-139	颜色27
							140-144	颜色28
							145-149	颜色29
							150-154	颜色30
							155-159	颜色31
							160-164	颜色32
							165-169	颜色33
							170-174	颜色34
							175-179	无功能
							180-201	颜色顺时针渐变 快到慢
							202-207	停(颜色停在此时的颜色)
							208-229	颜色逆时针渐变 快到慢
							230-234	无功能
							235-249	颜色跳变 快到慢
							250-255	无功能
9	9	9	9	9		图案	0-3	无功能
							4	图案1
							5	图案2
							6	图案3
							.	.
							253	图案250
							254	图案251
10	10	10	10	10		LED内置	255	图案252
							0-5	无功能
							6-10	内置1
							11-15	内置2
							16-20	内置3
							21-25	内置4
							26-30	内置5
							31-35	内置6
							36-40	内置7
							41-45	内置8
							46-50	内置9
							51-55	内置10
							56-60	内置11
							61-65	内置12
							66-70	内置13
							71-75	内置14
							76-80	内置15
							81-85	内置16
							86-90	内置17
							91-95	内置18
							96-100	内置19
							101-105	内置20
							106-110	内置21
							111-115	内置22
							116-120	内置23
							121-125	内置24
							126-130	内置25
							131-135	内置26



模式/通道						通道名称	DMX值	功能
135CH	111CH	64CH	30CH	24CH	15CH			
10	10	10	10	10		LED内置	136-140	内置27
							141-145	内置28
							146-150	内置29
							151-155	内置30
							156-160	内置31
							161-165	内置32
							166-170	内置33
							171-175	内置34
							176-180	内置35
							181-185	内置36
							186-190	内置37
							191-195	内置38
							196-200	内置39
							201-205	内置40
							206-210	内置41
							211-215	内置42
							216-255	无功能
11	11	11	11	11		LED内置速度	0-127	正向快到慢
							128	停止
							129-255	反向慢到快
12	12	12	12	12		LED内置拖尾时间	0-255	快到慢
13	13	13	13	13		反向底颜色	0	无功能
							1-2	白色2700K(R=156, G=118, B=0, W=63)
							3-4	白色3200K(R=156, G=141, B=5, W=89)
							5-6	白色4200K(R=156, G=141, B=14, W=255)
							7-8	白色5600K(R=156, G=207, B=54, W=255)
							9-10	白色8000K(R=130, G=255, B=96, W=255)
							11	蓝色 (R=0, G=0, B=255, W=0)
							12-48	R=0, G加, B=255, W=0
							49	青蓝 (R=0, G=255, B=255, W=0)
							50-86	R=0, G=255, B减, W=0
							87	绿 (R=0, G=255, B=0, W=0)
							88-124	R加, G=255, B=0, W=0
							125	黄 (R=255, G=255, B=0, W=0)
							126-162	R=255, G减, B=0, W=0
							163	红 (R=255, G=0, B=0, W=0)
							164-200	R=255, G=0, B加, W=0
							201	品红 (R=255, G=0, B=255, W=0)
							202-238	R减, G=0, B=255, W=0
							239	蓝色 (R=0, G=0, B=255, W=0)
							240-247	颜色渐变 快到慢
							248-255	颜色跳变 快到慢
14	14	14	14	14		反向底颜色调光	0-255	由暗到亮
15	15					反向底颜色调光	0-255	由暗到亮
16	16	15	15	15	6	总调光1 (外圈)	0-255	由暗到亮
17	17		16		7	总调光1 (外圈)16bit	0-255	由暗到亮
16	18	16	17	16	6	总调光2(中心)	0-255	由暗到亮
17	19		18		7	总调光2 (中心)16bit	0-255	由暗到亮
18	20	17	19	17	8	频闪1(外圈)	0-19	关光
							20-24	开光
							25-69	频闪1 由快到慢
							70-89	频闪2(快开慢关) 由快到慢
							90-109	频闪3(慢开快关) 由快到慢
							110-129	频闪4(随机频闪) 由快到慢
							130-149	频闪5(随机快开慢关) 由快到慢
							150-169	频闪6(随机慢开快关) 由快到慢
							170-189	频闪7(脉冲频闪) 由快到慢
							190-209	频闪8(随机脉冲频闪) 由快到慢
							210-229	频闪9(渐亮渐灭) 由快到慢
							230-244	频闪10(脉冲频闪) 由快到慢
							245-255	开光
							0-19	关光
19	21	18	20	18	8	频闪2(中心)	20-24	开光



模式/通道						通道名称	DMX值	功能
135CH	111CH	64CH	30CH	24CH	15CH			
19	21	18	20	18	8	频闪2(中心)	25-69	频闪1 由快到慢
							70-89	频闪2(快开慢关) 由快到慢
							90-109	频闪3(慢开快关) 由快到慢
							110-129	频闪4(随机频闪) 由快到慢
							130-149	频闪5(随机快开慢关) 由快到慢
							150-169	频闪6(随机慢开快关) 由快到慢
							170-189	频闪7(脉冲频闪) 由快到慢
							190-209	频闪8(随机脉冲频闪) 由快到慢
							210-229	频闪9(渐亮渐灭) 由快到慢
							230-244	频闪10(脉冲频闪) 由快到慢
							245-255	开关
20	22	19	21	19	14	放大	0-255	由小到大
21	23	20	22	20	15	功能通道	0-9	无功能
							10-14	水平/垂直中断
							15-19	保留
							20-24	保留
							25-29	保留
							30-34	合并通道
							35-39	取消合并通道
							40-44	开除雾风机
							45-49	关除雾风机
							50-54	水平复位
							55-59	垂直复位
							60-64	放大复位
							65-69	保留
							70-74	所有复位
							75-79	保留
							80-84	保留
							85-89	保留
							90-94	保留
							95-99	保留
							100-104	保留
							105-109	保留
							110-114	保留
							115-119	保留
							120-124	风机ECO
							125-129	风机Full
							130-134	风机Auto
							135-139	调光快速
							140-144	调光平滑
							145-149	调光曲线Linear
							150-154	调光曲线Square
							155-159	调光曲线I Squa
							160-164	调光曲线Scurve
							165-169	白模式 WHITE
							170-174	白模式 FULL
							175-179	单色时色温校正关
							180-184	单色时色温校正开
							185-239	无功能
							240-247	开色温校正
							248-255	关色温校正
22	24		23	21	9	R(C)总	0-255	由暗到亮(由亮到暗)
23	25		24			R(C)总 16bit	0-255	由暗到亮(由亮到暗)
24	26	22	25	22	10	G(M)总	0-255	由暗到亮(由亮到暗)
25	27		26			G(M)总 16bit	0-255	由暗到亮(由亮到暗)
26	28	23	27	23	11	B(Y)总	0-255	由暗到亮(由亮到暗)
27	29		28			B(Y)总 16bit	0-255	由暗到亮(由亮到暗)
28	30	24	29	24	12	W总	0-255	由暗到亮
29	31		30			W总 16bit	0-255	由暗到亮
30						总调光1	0-255	由暗到亮
31						总调光1 16bit	0-255	由暗到亮
32	32	25				R(C)1	0-255	由暗到亮(由亮到暗)
33	33					R(C)1 16bit	0-255	由暗到亮(由亮到暗)



模式/通道						通道名称	DMX值	功能
135CH	111CH	64CH	30CH	24CH	15CH			
34	34	26				G(M)1	0-255	由暗到亮(由亮到暗)
35	35					G(M)1 16bit	0-255	由暗到亮(由亮到暗)
36	36	27				B(Y)1	0-255	由暗到亮(由亮到暗)
37	37					B(Y)1 16bit	0-255	由暗到亮(由亮到暗)
38						总调光2	0-255	由暗到亮
39						总调光2 16bit	0-255	由暗到亮
40	38	28				R(C)2	0-255	由暗到亮(由亮到暗)
41	39					R(C)2 16bit	0-255	由暗到亮(由亮到暗)
42	40	29				G(M)2	0-255	由暗到亮(由亮到暗)
43	41					G(M)2 16bit	0-255	由暗到亮(由亮到暗)
44	42	30				B(Y)2	0-255	由暗到亮(由亮到暗)
45	43					B(Y)2 16bit	0-255	由暗到亮(由亮到暗)
.	.	.				.	.	
.	.	.				.	.	
.	.	.				.	.	
.	.	.				.	.	
118						总调光12	0-255	由暗到亮
119						总调光12 16bit	0-255	由暗到亮
120	98	58				R(C)12	0-255	由暗到亮(由亮到暗)
121	99					R(C)12 16bit	0-255	由暗到亮(由亮到暗)
122	100	59				G(M)12	0-255	由暗到亮(由亮到暗)
123	101					G(M)12 16bit	0-255	由暗到亮(由亮到暗)
124	102	60				B(Y)12	0-255	由暗到亮(由亮到暗)
125	103					B(Y)12 16bit	0-255	由暗到亮(由亮到暗)
126						总调光13(中心)	0-255	由暗到亮
127						总调光13(中心)16bit	0-255	由暗到亮
128	104	61				R(C)13(中心)	0-255	由暗到亮(由亮到暗)
129	105					R(C)13(中心)16bit	0-255	由暗到亮(由亮到暗)
130	106	62				G(M)13(中心)	0-255	由暗到亮(由亮到暗)
131	107					G(M)13(中心) 16bit	0-255	由暗到亮(由亮到暗)
132	108	63				B(Y)13(中心)	0-255	由暗到亮(由亮到暗)
133	109					B(Y)13(中心)16bit	0-255	由暗到亮(由亮到暗)
134	110	64				W13(中心)	0-255	由暗到亮
135	111					W13(中心)16bit	0-255	由暗到亮